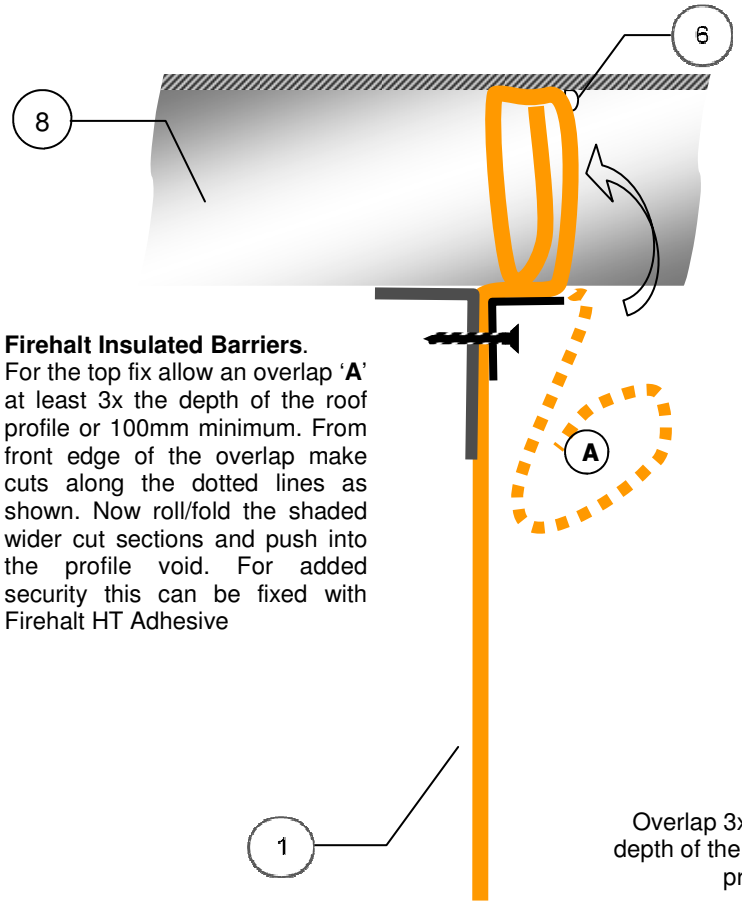

Firehalt Insulated Barriers.
For the top fix allow an overlap '**A**' at least 3x the depth of the roof profile or 100mm minimum. From front edge of the overlap make cuts along the dotted lines as shown. Now roll/fold the shaded wider cut sections and push into the profile void. For added security this can be fixed with Firehalt HT Adhesive

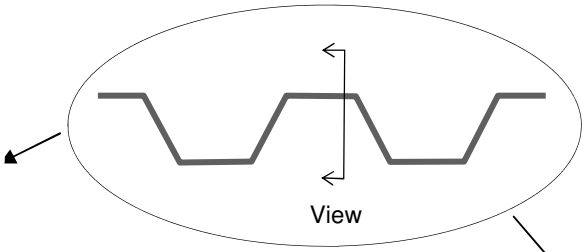

Firehalt SF
When using this technique with single thickness fabric barriers use a reinforcing piece of insulated barrier measuring at least 3x the depth of the roof profile plus 100mm. Then proceed as shown for Firehalt Insulated barriers

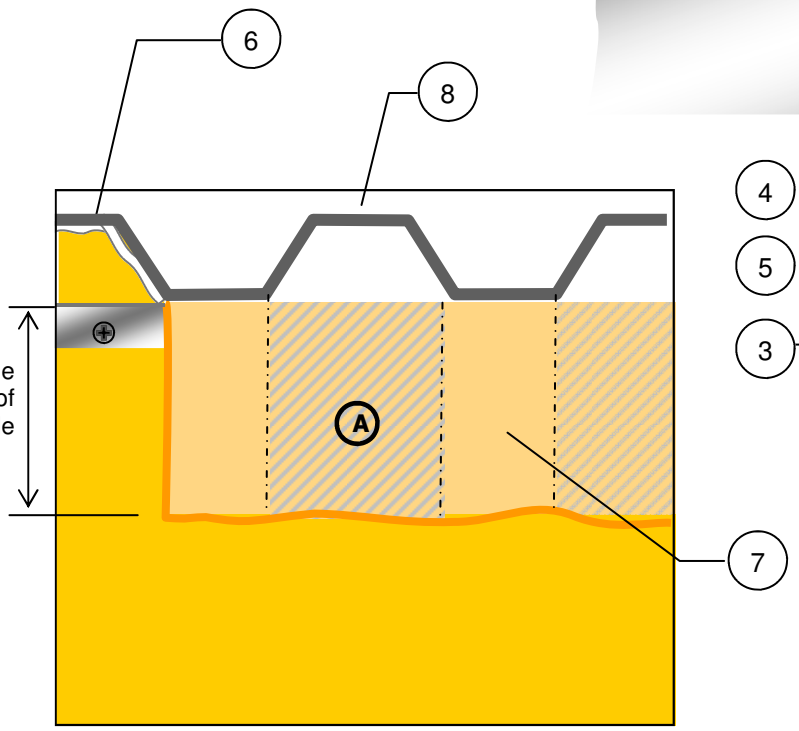

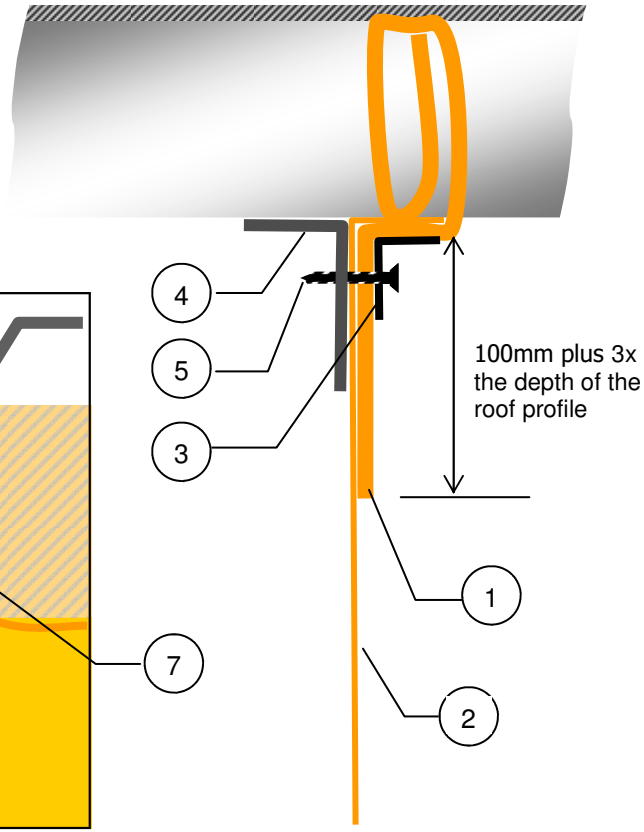

#	DESCRIPTION	NOTES
1	FIREHALT BARRIERS	With Insulation
2	FIREHALT SF	Integrity Only
3	25 X 25mm GALV ANGLE	250mm Fixing Centres
4	50 X 25mm GALV ANGLE	250mm Fixing Centres
5	SELF TAP SCREWS	
6	FIREHALT HT ADHESIVE	
7	TOP FIX OVERLAP	3x the depth of the roof profile
8	ROOF PROFILE	

Firehalt®

Tel : +44 (0)161 344 2484
Fax : +44 (0)161 344 2486
Email : sales@culimeta-saveguard.com
Web : www.firehalt.com

This fixing detail is for guidance purposes only. Seek approval from Building Control or a qualified fire engineer before installation

Title: Profile Roof Blocking

Products: All Products

Certification Ref: t.b.a.

Fix Detail : # 12